







 
 





























 


Original	Replacement
 Power	 Power
 TV/R	 TV/R
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 Pre Ch
 SAT	 Smart
 Page+	 Ch +
 Page-	 Ch -

Original	Replacement
 Timer	 AV
 Sub	 Subt
 Vol+	 Vol +
 Vol-	 Vol -
 Display	 Info
 Mode	 List
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Back	 Back
 Help	 D. Menu
 Red / Audio	 Red
 Red / Audio	 Dual





Original	Replacement
 Green / Pause	 Green
 Green / Pause	 +  Shift + Pause
 Yellow / Zoom	 Yellow
 Yellow / Zoom	 Eject
 Blue / Info	 Blue
 Blue / Info	 +  Shift + Info
 Mouse	 Options
 EPG	 Guide
 Format	 Format
 Find	 +  Shift + TV/R
 F1	 +  Shift + 1
 TXT	 Text
 <<	 <<
 Play	 Play
 >>	 >>
 Pause	 Pause
 Stop	 Stop

Original	Replacement
 USB	 Media
 Rec	 Rec

