 




 

 

 



 





 

 



 
 
 







 




 




 

 

 



 



 



 

 

 






Original	Replacement	Original	Replacement
 Standby / On	 Power	 i / Status	 Info
 Sleep	 Sleep	 Speakers	 List
 Dimmer	 Blue	 PHASE	 Shift + 3D
 ECO	 3D	 Signal Sel.	 AV
 BD	 1	 Auto / Direct	 TV/R
 GAME	 2	 Standard	 Format
 DVR / BDR	 3	 Adv. Surr.	 Subt
 DVD	 4	 Mute	 Mute
 SAT / CBL	 5	 Tools Menu	 Options
 HDMI	 6	 Up	 Up
 MHL	 Shift + 6	 Left	 Left
 iPod / USB	 7	 Enter	 Ok
 CD	 8	 Right	 Right
 ADPTER	 9	 Down	 Down
 TUNER	 Guide	 Home Menu	 Menu
 TV	 0	 iPod Ctrl.	 D. Menu
 NETWORK	 Pre Ch	 Return	 Back





Original		Replacement		Original		Replacement	
	Volume+		Vol +		Random		Text
	Volume-		Vol -		Disp		Shift + Info
	Pause		Pause		Audio		Dual
	BAND		Shift + Play		SB CH		Media
	Play		Play		CH Level CH Sel		Smart
	PTY		Shift + Stop		CH Level-		Ch -
	Stop		Stop		CH Level+		Ch +
	+Fav		Shift + Pre Ch		Bass-		Shift + Down
	Preset -		Shift + I<<		Bass+		Shift + Up
	I<<		I<<		Treble-		Shift + Left
	Preset+		Shift + >>I		Treble+		Shift + Right
	>>I		>>I				
	Tune-		Shift + <<<				
	<<<		<<<				
	Tune+		Shift + >>>				
	>>>		>>>				
	Repeat		Shift + Text				

