


 

 




 
 
 
 

 

 


Original	Replacement	Original	Replacement
 System Power	 Power	 A/B/C/D/E	 Smart
 Standby	 Shift + Power	 Vol+	 Vol +
 Sleep	 Sleep	 Vol-	 Vol -
 PHONO	 Shift + 1	 Mute	 Mute
 TUNER	 Shift + 2	 Level	 Media
 CD	 Shift + 3	 Set Menu	 Menu
 MULTI CH IN	 Shift + 4	 Up	 Up
 V-AUX	 Shift + 5	 Left	 Left
 CBL / SAT	 Shift + 6	 Select	 Ok
 MD / TAPE	 Shift + 7	 Right	 Right
 CD-R	 Shift + 8	 Down	 Down
 DTV	 Shift + 9	 Test	 Text
 VCR 1	 Shift + Guide	 On Screen / Info	 Info
 DVR / VCR2	 Shift + 0	 Pure Direct	 Guide
 DVD	 Shift + Pre Ch	 Night	 0
 Preset+	 Ch +	 Straight Effect	 Dual
 Preset-	 Ch -	 Stereo	 1







Original		Replacement		Original		Replacement	
	System Power		Power		2 Tuner		2
	Standby		Shift + Power		3 Tuner		3
	Sleep		Sleep		4 Tuner		4
	Volume +		Vol +		5 Tuner		5
	Volume -		Vol -		6 Tuner		6
	Mute		Mute		7 Tuner		7
	A/B/C/D/E		Smart		8 Tuner		8
	Title Tuner		Media		9 Tuner		9
	Menu Tuner		Menu		0 Tuner		0
	Up Tuner		Up		ENTER Tuner		Pre Ch
	Left Tuner		Left				
	Select Tuner		Ok				
	Right Tuner		Right				
	Down Tuner		Down				
	Return Tuner		Back				
	Display Tuner		Info				
	1 Tuner		1				

