











 









 



 













Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV/AV	 AV
 SEL	 Menu
 FINE TUNING	 Right
 FINE TUNING	 Left
 DUAL	 Smart
 GUIDE	 Media
INFO	Text
DUAL	D. Menu
FORMAT	TV/R
SLEEP	<<<

Original	Replacement
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -
 (X)	 Exit
 >>I	 >>I
 OK	 Ok
 SEL	 Menu
 Fine Tuning+	 Right
 Fine Tuning-	 Left
 TV/AV	 AV
 STD / [≡X]	 Smart
 M	 Media
 Text	 Text
 [/≡]	 D. Menu
 Reveal	 TV/R
 [1<≡]	 <<<



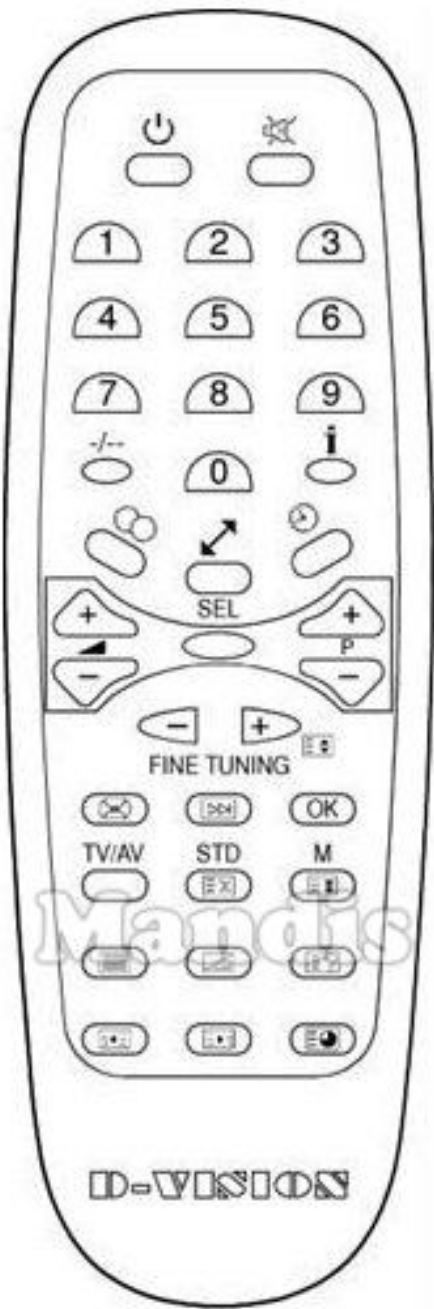

Original	Replacement	Original	Replacement
	[≡>1]		>>
	[≡O]		Options

