 






 




 


 

 








 




 







Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV/AV		AV
	STD / [≡X]		Smart
	M		Media
	i		Text
	OO		D. Menu
	Picture		TV/R
	⊖ Sleep		<<





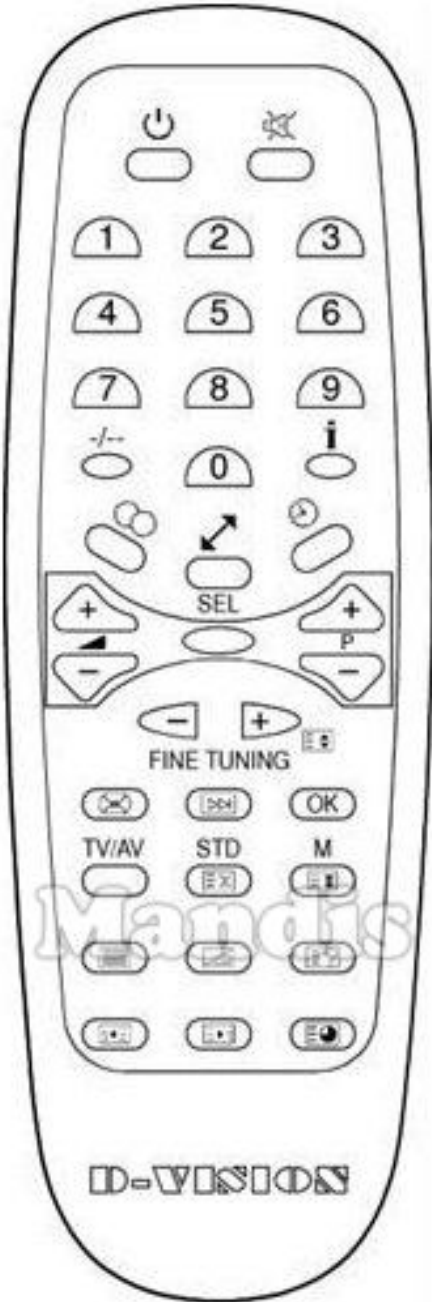	Original	Replacement	Original	Replacement
	[= > 1]	>>		
	[= 0]	SETTINGS OPT Options		

