
 



















 
 



Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ✓	 Guide / EPG / -/--
 0	 0
 Red / <<<	 Red / Netflix / Search
 Red / <<<	 <<< / Tune-
 Green / Stop	 Green / APP / Repeat
 Green / Stop	 Stop / Hold

Original	Replacement
 Yellow / Play	 Play / Slow
 Yellow / Play	 Yellow / YouTube / Repeat
 Blue / >>>	 >>> / Tune+
 Blue / >>>	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI	 D.Menu / Top
 Exit / Recall	 Back / Return
 Exit / Recall	 Exit / Cancel / Clear
 Info	 Info / Angle
 Prog +	 CH+ / Page+
 TV / Radio	 TV/Radio /
 Vol +	 Vol+
 Prog -	 CH- / Page-





Original	Replacement
 Menu	 Menu / Home
 Vol -	 Vol-
 TV/SAT	 Smart / List
 TXT	 Text / Goto
 Stop	 Pause / Step / Freeze
 EXT	 Display / Media
 SAT1 + OK	 Shift + 2
 SAT2 + OK	 Shift + 3
 TV + OK	 Shift + 1
 PIP	 Picture / Format

Original	Replacement





Original	Replacement
	Mute / Dimmer
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Guide / EPG / -/--
	0
	Shift + YouTube / Repeat A-B
	<< / Tune-
	Red / Netflix / Search
	Green / APP / Repeat

Original	Replacement
	Stop / Hold
	Play / Slow
	Yellow / YouTube / Repeat
	>> / Tune+
	Blue / Prime Video / Random
	Up
	Left
	OK
	Right
	Down
	D.Menu / Top
	Exit / Cancel / Clear
	Back / Return
	Info / Angle
	CH+ / Page+
	TV/Radio /
	Vol+






 












Original	Replacement
 Prog -	 CH- / Page-
 Menu	 Menu / Home
 Vol -	 Vol-
 TV/SAT	 Smart / List
 TXT	 Text / Goto
 Stop	 Pause / Step / Freeze
 EXT	 Display / Media
 SAT1 + OK	 Shift + 2
 SAT2 + OK	 Shift + 3
 TV + OK	 Shift + 1

Original	Replacement





Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ✓	 Guide / EPG / -/--
 0	 0
 A/B	 Shift + Yellow / YouTube /
 Red / <<<	 Red / Netflix / Search
 Red / <<<	 <<< / Tune-
 Green / Stop	 Stop / Hold

Original	Replacement
 Green / Stop	 Green / APP / Repeat
 Yellow / Play	 Play / Slow
 Yellow / Play	 Yellow / YouTube / Repeat
 Blue / >>>	 >>> / Tune+
 Blue / >>>	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI	 D.Menu / Top
 Exit / Recall	 Back / Return
 Exit / Recall	 Exit / Cancel / Clear
 Info	 Info / Angle
 Prog +	 CH+ / Page+
 TV / Radio	 TV/Radio /
 Vol +	 Vol+





Original	Replacement
 Prog -	 CH- / Page-
 Menu	 Menu / Home
 Vol -	 Vol-
 TV/SAT	 Smart / List
 TXT	 Text / Goto
 Stop	 Pause / Step / Freeze
 EXT	 Display / Media
 SAT1 + OK	 Shift + 2
 SAT2 + OK	 Shift + 3
 TV + OK	 Shift + 1

Original	Replacement

