


 












 
 









 

















Original	Replacement
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Rec / Rec Mode
	 << / Tune-
	 >> / Tune+
	 Sound / Title
	 Audio / Lang I/II
	 Subtitle / EQ
	 Picture / Format
	 Sleep / Timer
	 Text / Goto
	 AV / Input / RDS
	 Menu / Home
	 Up

Original	Replacement
	 Info / Angle
	 Left
	 OK
	 Right
	 Down
	 Back / Return
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 Display / Media
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5





	Original	Replacement		Original	Replacement
	6	6			
	7	7			
	8	8			
	9	9			
	Guide	Guide / EPG / -/--			
	0	0			
	Recall	Fav / Marker / PC			
	Red	Red / Netflix / Search			
	Green	Green / APP / Repeat			
	Yellow	Yellow / YouTube / Repeat			
	Blue	Blue / Prime Video / Random			
	Ratio	Shift + Picture / Format			
	TV	Shift + 1			

	Original	Replacement		Original	Replacement

