 

 
 






 






 

 
 
 
 
 





 
 
 
 
 


Original	Replacement
 On	 Power
 Off	 Shift + Power
 Mute	 Mute
 AVR	 Shift + 1
 DVD	 Shift + 2
 CD	 Shift + 3
 Tape	 Shift + 4
 VID1/VCR	 Shift + 5
 VID2/TV	 Shift + 6
 VID3/CBL/SAT	 Shift + 7
 DIM	 Shift + 8
 AM/FM	 Shift + 9
 6 CH	 Shift + Guide
 Sleep	 Sleep
 Test	 Smart
 Input	 AV
 Vol+	 Vol +

Original	Replacement
 Surr.	 Dual
 Night	 Exit
 [≡]	 Text
 Vol-	 Vol -
 CH./[≡?]	 TV/R
 Up	 Up
 SPKR/Menu	 Menu
 Left	 Left
 Set	 Ok
 Right	 Right
 Digital/[≡X]	 Media
 Down	 Down
 Delay/Normal	 Info
 1	 1
 2	 2
 3	 3
 4	 4





 



 

 

 



 


 
 




 



 
 

 


 
 

 



 

 
 

 



 


 
 


 



 
 








Original	Replacement	Original	Replacement
 5	 5	 Dolby	 Shift + Red
 6	 6	 DTS Surr.	 Shift + Green
 7	 7	 DTS Neo 6	 Shift + Yellow
 8	 8	 Logic 7	 Shift + Pre Ch
 Tun-M/[\equiv +]	 Guide	 Stereo	 Shift + Blue
 9	 9	 Skip Dwn DVD	 I<<
 0	 0	 Skip Up DVD	 >>I
 Mem/[\equiv ♦]	 Pre Ch	 << DVD	 <<
 Tuning ▲ / Red	 Ch +	 Play DVD	 Play
 Tuning ▲ / Red	 Red	 >> DVD	 >>
 Direct/Green	 Green	 Stop DVD	 Stop
 Clear/Yellow	 Yellow	 Pause DVD	 Pause
 Preset ▲ / Blue	 Shift + Ch +		
 Preset ▲ / Blue	 Blue		
 Tuning ▼	 Ch -		
 RDS/D.Skip	 Options		
 Preset ▼	 Shift + Ch -		

Original	Replacement	Original	Replacement
 Dolby	 Shift + Red	 DTS Surr.	 Shift + Green
 DTS Neo 6	 Shift + Yellow	 Logic 7	 Shift + Pre Ch
 Stereo	 Shift + Blue	 Skip Dwn DVD	 I<<
 Skip Up DVD	 >>I	 << DVD	 <<
 << DVD	 Play	 >> DVD	 >>
 Play DVD	 Play	 Stop DVD	 Stop
 >> DVD	 >>	 Pause DVD	 Pause
 Stop DVD	 Stop		
 Pause DVD	 Pause		








 

 
 
 
 
 
 

 
 
 
 
 
 
 
 
 

 

 
 


 
 
 
 





 

 
 
 

 








Original		Replacement		Original		Replacement	
	Power On		Power		3		3
	Power Off		Shift + Power		4		4
	Vol+		Vol +		5		5
	Night		Exit		6		6
	[≡]		Text		7		7
	Vol-		Vol -		8		8
	CH./[≡?]		TV/R		Tun-M/[≡+]		Guide
	Up		Up		9		9
	SPKR/Menu		Menu		0		0
	Left		Left		Mem/[≡◇]		Pre Ch
	Set		Ok		Direct		Smart
	Right		Right		Clear		Shift + Exit
	Digital/[≡X]		Media		Preset ▲		Ch +
	Down		Down		RDS/D.Skip		Options
	Delay/Normal		Info		Preset ▼		Ch -
	1		1		I<<		I<<
	2		2		>>I		>>I



 






Original		Replacement		Original		Replacement	
	Power On		Power		Preset ▲/Blue		Ch +
	Power Off		Shift + Power		RDS/D.Skip		Options
	SPKR/MENU		Menu		I<<		I<<
	Delay/Normal		Info		>>I		>>I
	1		1		<<		<<
	2		2		Play		Play
	3		3		>>		>>
	4		4		Stop		Stop
	5		5		Pause		Pause
	6		6				
	7		7				
	8		8				
	Tun-M/[≡+]		Guide				
	9		9				
	0		0				
	Mem/[≡◆]		Pre Ch				
	Direct		Smart				





	Original	Replacement	Original	Replacement
	<<	 <<		
	>>	 Play		
	>>	 >>		
	Rec	 Rec		
	Stop	 Stop		

