



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-		Guide
	Recall		Back
	Source		AV
	Display		Info
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	P.Mode		Format
	S.Mode		Dual
	CH+		Ch +
	CH-		Ch -
	Input		Shift + AV
	Fav / Angle		Pre Ch
	Zoom		Eject
	Sleep		Sleep
	Red		Red





Original		Replacement		Original	Replacement
	Green / 3D		Green		
	Green / 3D		3D		
	Yellow		Yellow		
	Blue		Blue		
	Play / Pause		Play		
	Play / Pause		Pause		
	FR		<<		
	FF		>>		
	Stop		Stop		
	Prev		I<<		
	Next		>>I		
	Media		Media		
	Keyboard		Text		
	PC		D. Menu		
	Refresh		List		
	Search		TV/R		
	Home		Smart		

