






















 























 



 









 









Original	Replacement	Original	Replacement
Power Receiver	Power	Stereo	Audio / Lang I/II
DVD	2	Input Sel	AV / Input / RDS
TV	1	Signal Select	Sound / Title
VCR	4	Midnight /	Sleep / Timer
CD-R	3	Mute	Mute / Dimmer
TUN	6	Up/Tune+	Up
Test Tone	Display / Media	Up/Tune+	Shift + >> /
Input ATT	TV/Radio /	Left/ST-	Left
FL Dimmer	Shift + Mute / Dimmer	Left/ST-	Shift + I<< / Preset-
CH Select	Smart / List	Enter	OK
CH Level-	CH- / Page-	Right/ST+	Right
CH Level+	CH+ / Page+	Right/ST+	Shift + >>I / Preset+
Effect-	<< / Tune-	Down/Tune-	Down
Effect+	>> / Tune+	Down/Tune-	Shift + << /
Remote Setup	Setup / OPT /	Master	Vol+
Standard	Subtitle / EQ	Master Volume-	Vol-
Adv.Surr.	Eject / Surround	TV Vol+	Shift + Vol+






 

 

 






Original	Replacement	Original	Replacement
 Power DVD	 Power	 Channel+ DVD	 CH+ / Page+
 1 DVD	 1	 Channel- DVD	 CH- / Page-
 2 DVD	 2	 Up DVD	 Up
 3 DVD	 3	 Down DVD	 Down
 4 DVD	 4	 Right DVD	 Right
 5 DVD	 5	 Left DVD	 Left
 6 DVD	 6	 Enter DVD	 OK
 7 DVD	 7	 Pause DVD	 Pause / Step / Freeze
 8 DVD	 8	 Rec DVD	 Rec / Rec Mode
 9 DVD	 9	 Play DVD	 Play / Slow
 0 DVD	 0	 << DVD	 << / Tune-
 +10 DVD	 Guide / EPG / -/--	 >> DVD	 >> / Tune+
 Menu DVD	 Menu / Home	 >>I DVD	 >>I / Preset+
 Top Menu DVD	 D.Menu / Top	 Stop DVD	 Stop / Hold
 Master	 Vol+	 I<< DVD	 I<< / Preset-
 Master volume-	 Vol-	 Audio DVD	 Audio / Lang I/II
 Mute	 Mute / Dimmer	 Sub Title DVD	 Subtitle / EQ

 




Original	Replacement
 Angle DVD	 Info / Angle
 Power VCR	 Shift + Power
 1 VCR	 Shift + 1
 2 VCR	 Shift + 2
 3 VCR	 Shift + 3
 4 VCR	 Shift + 4
 5 VCR	 Shift + 5
 6 VCR	 Shift + 6
 7 VCR	 Shift + 7
 8 VCR	 Shift + 8
 9 VCR	 Shift + 9
 0 VCR	 Shift + 0
 Disc VCR	 Shift + Back / Return
 Channel+ VCR	 Shift + CH+ /
 Channel- VCR	 Shift + CH- /
 Up VCR	 Shift + Up
 Down VCR	 Shift + Down

Original	Replacement
 Right VCR	 Shift + Right
 Left VCR	 Shift + Left
 Enter VCR	 Shift + OK
 Pause VCR	 Shift + Pause / Step /
 Play VCR	 Shift + Play /
 Stop VCR	 Shift + Stop /
 << VCR	 Shift + << /
 >>I VCR	 Shift + >>I / Preset+
 >> VCR	 Shift + >> /
 I<< VCR	 Shift + I<< / Preset-
 Rec VCR	 Shift + Rec / Rec Mode



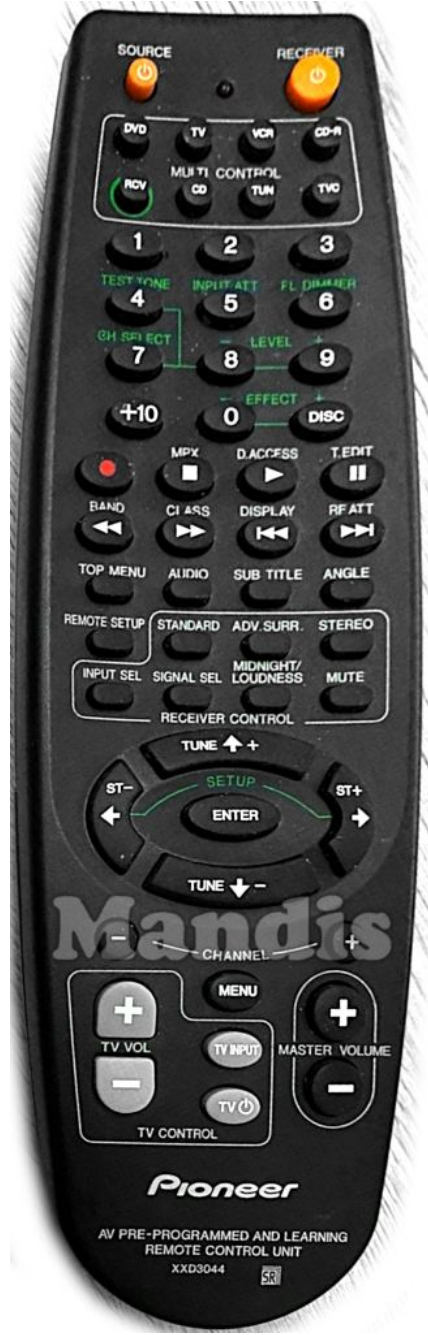

 














 





 


























 





Original	Replacement
Power CD	Power
1 CD	1
2 CD	2
3 CD	3
4 CD	4
5 CD	5
6 CD	6
7 CD	7
8 CD	8
9 CD	9
0 CD	0
+10 CD	Guide / EPG / -/--
Disc CD	Back / Return
Master	Vol+
Master Volume-	Vol-
Mute	Mute / Dimmer
Channel+ CD	CH+ / Page+

Original	Replacement
Channel- CD	CH- / Page-
Up CD	Up
Down CD	Down
Right CD	Right
Left CD	Left
Enter CD	OK
Pause CD	Pause / Step / Freeze
Play CD	Play / Slow
<< CD	<< / Tune-
>> CD	>> / Tune+
>> CD	>> / Preset+
I<< CD	I<< / Preset-
Stop CD	Stop / Hold
Power TVC	Shift + Power
1 TVC	Shift + 1
2 TVC	Shift + 2
3 TVC	Shift + 3





Original	Replacement	Original	Replacement
 Power TUN	 Power	 Left TUN	 Left
 1 TUN	 1	 D.Access TUN	 Play / Slow
 2 TUN	 2	 Band TUN	 Smart / List
 3 TUN	 3	 T.Edit	 Pause / Step / Freeze
 4 TUN	 4	 Class TUN	 << / Tune-
 5 TUN	 5	 RF ATT TUN	 >> / Tune+
 6 TUN	 6	 MPX TUN	 Stop / Hold
 7 TUN	 7	 Display TUN	 Display / Media
 8 TUN	 8	 Power CDR	 Shift + Power
 9 TUN	 9	 1 CDR	 Shift + 1
 0 TUN	 0	 2 CDR	 Shift + 2
 Master	 Vol+	 3 CDR	 Shift + 3
 Master volume-	 Vol-	 4 CDR	 Shift + 4
 Mute	 Mute / Dimmer	 5 CDR	 Shift + 5
 Up TUN	 Up	 6 CDR	 Shift + 6
 Down TUN	 Down	 7 CDR	 Shift + 7
 Right TUN	 Right	 8 CDR	 Shift + 8





Original	Replacement
9 CDR	Shift + 9
0 CDR	Shift + 0
+10 CDR	Shift + Guide / EPG / -/-
Channel+ CDR	Shift + CH+ /
Channel- CDR	Shift + CH- /
Up CDR	Shift + Up
Down CDR	Shift + Down
Right CDR	Shift + Right
Left CDR	Shift + Left
Enter CDR	Shift + OK
Pause CDR	Shift + Pause / Step /
Play CDR	Shift + Play /
Stop CDR	Shift + Stop /
<< CDR	Shift + << /
Rec CDR	Shift + Rec / Rec Mode
I<< CDR	Shift + I<< / Preset-
>> CDR	Shift + >> /

Tune+

Original	Replacement
>>I CDR	Shift + >>I / Preset+

