 


Original	Replacement	Original	Replacement
Picture Mode	Picture / Format	CH+ / Tracking/V-Lock+	CH+ / Page+
DVD Status	Info / Angle	Cancel / Reset	Exit / Cancel / Clear
Dubbing	Yellow / YouTube / Repeat	-/-- / >=10	Guide / EPG / -/--
VHS/DVD	Smart / List	Play	Play / Slow
Quick Replay	Red / Netflix / Search	Up	Up
Group	Zoom / Size	Left	Left
P.Memory	Fav / Marker / PC	Enter	OK
Return	Back / Return	Right	Right
AV Enhancer	AV / Input / RDS	Down	Down
Direct Navigator / Top Menu	D.Menu / Top	Display	Display / Media
Play List / Menu	Menu / Home	Setup	Setup / OPT /
Play Mode	Shift + Play /	Timer	Sleep / Timer
REW / << Slow/Search	<< / Tune-	0	0
FF / Slow/Search	>> / Tune+	Audio	Audio / Lang I/II
VHS/DVD Power	Power	1	1
Pause / Slow	Pause / Step / Freeze	2	2
CH- / Tracking/V-Lock-	CH- / Page-	3	3

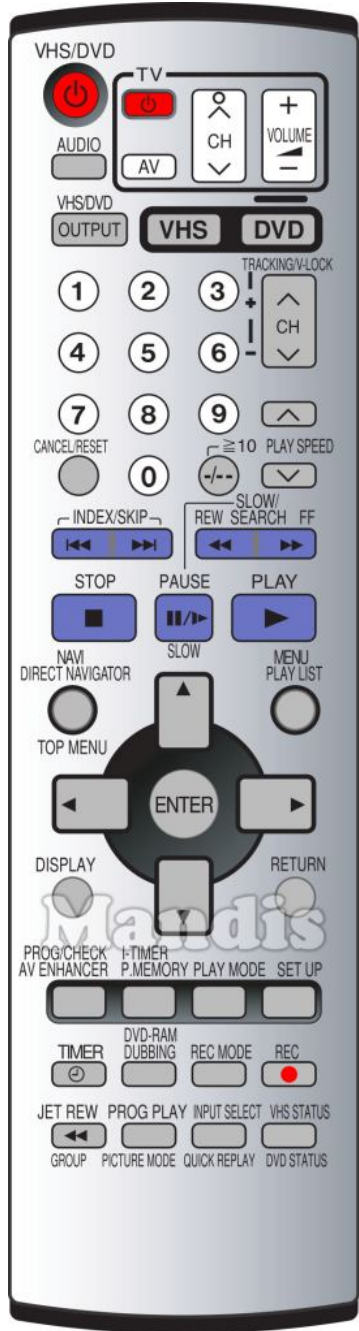 




	Original	Replacement	Original	Replacement
	4	4		
	5	5		
	6	6		
	7	7		
	8	8		
	9	9		
	I<< Skip	I<< / Preset-		
	Skip >>I	>>I / Preset+		
	Stop	Stop / Hold		





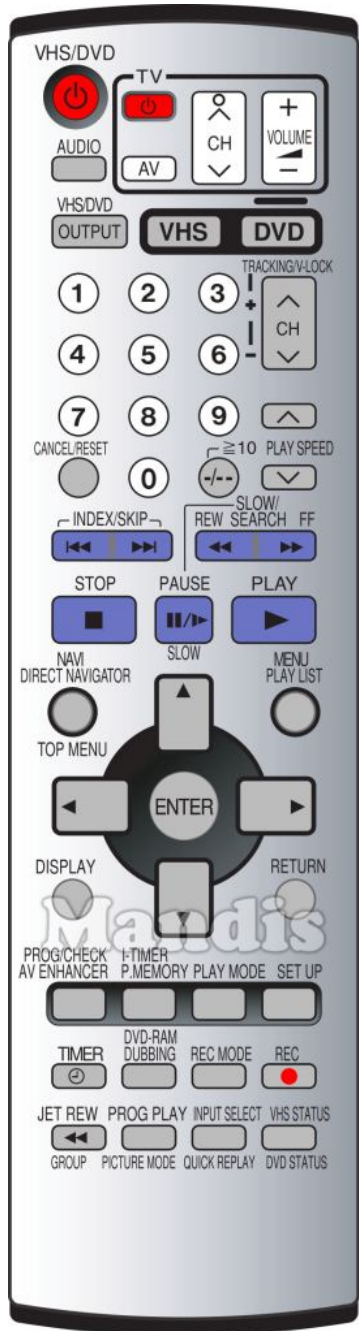

	Original	Replacement	
	Prog Play	+	Shift + Play /
	I-Timer	+	Shift + Sleep / Timer
	Cancel / Reset		Exit / Cancel / Clear
	VHS/DVD		Smart / List
	Display		Display / Media
	VCR Status		Info / Angle
	Dubbing		Yellow / YouTube / Repeat
	Jet Rew	+	Shift + << /
	Pause / Slow		Pause / Step / Freeze
	CH+ / Tracking/V-Lock+		CH+ / Page+
	CH- / Tracking/V-Lock-		CH- / Page-
	VHS/DVD Power		Power
	-/-- / >=10		Guide / EPG / -/--
	Return		Back / Return
	Prog/Check		TV/Radio /
	I<< Index		I<< / Preset-
	Index >>I		>>I / Preset+

	Original	Replacement	
	FF		>> / Tune+
	Play		Play / Slow
	Menu		Menu / Home
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Stop		Stop / Hold
	Rec Mode	+	Shift + Rec / Rec Mode
	Timer		Sleep / Timer
	Rec		Rec / Rec Mode
	0		0
	Audio		Audio / Lang I/II
	1		1
	2		2
	3		3





