















 

 
 
 



 

 











Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 PP	 Back / Return
 I - II	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 P<P	 Fav / Marker / PC
 --	 Guide / EPG / -/-
 M/Menu	 Menu / Home

Original	Replacement
 i	 Info / Angle
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Vol+	 Vol+
 Vol-	 Vol-
 Red/Sound	 Red / Netflix / Search
 Green/Picture	 Green / APP / Repeat
 Yellow/Feature	 Yellow / YouTube / Repeat
 Blue/Install	 Blue / Prime Video / Random
 TV	 TV/Radio /
 AV	 AV / Input / RDS
 [=]	 Text / Goto
 [=o]	 Subtitle / EQ





Original	Replacement
[=+]	<b>FORMAT PICTURE</b> Picture / Format
[=?]	<b>SURROUND</b> Eject / Surround
[=i]	<b>LIST SMART</b> Smart / List
[=x]	<b>MEDIA DISPLAY</b> Display / Media
[=◆]	<b>SIZE ZOOM</b> Zoom / Size
[.=]	<b>OPT-TOOLS SETUP</b> Setup / OPT /

Original	Replacement

