

 



 



 

 

 



 





 

 



 





































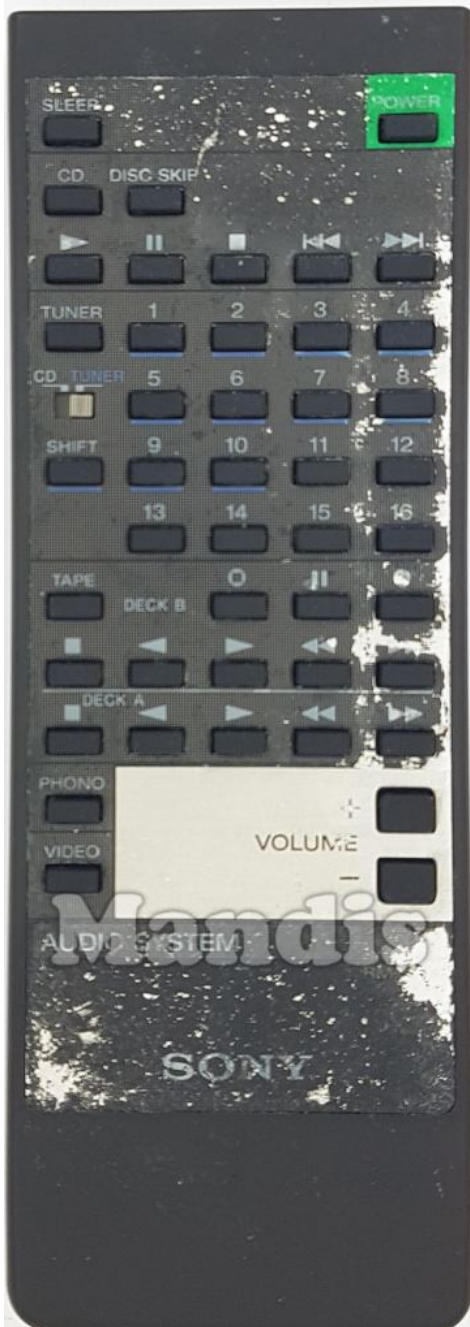 


 



 

 

 

 



 

 





 


 
 

 







 





Original	Replacement	Original	Replacement
 Power	 Power	 3 Tuner	 3
 Sleep	 Sleep / Timer	 4 Tuner	 4
 Phono	 Red / Netflix / Search	 5 Tuner	 5
 Video	 Blue / Prime Video / Random	 6 Tuner	 6
 Tape	 Green / APP / Repeat	 7 Tuner	 7
 Tuner	 TV/Radio /	 8 Tuner	 8
 CD	 Yellow / YouTube / Repeat	 9 Tuner	 9
 Volume+	 Vol+	 10 Tuner	 0
 Volume-	 Vol-	 Shift	 Smart / List
 Disc Skip	 Zoom / Size	 1 CD	 Shift + 1
 Play CD	 Play / Slow	 2 CD	 Shift + 2
 Pause CD	 Pause / Step / Freeze	 3 CD	 Shift + 3
 Stop CD	 Stop / Hold	 4 CD	 Shift + 4
 I<< CD	 I<< / Preset-	 5 CD	 Shift + 5
 >>I CD	 >>I / Preset+	 6 CD	 Shift + 6
 1 Tuner	 1	 7 CD	 Shift + 7
 2 Tuner	 2	 8 CD	 Shift + 8





Original	Replacement
 9 CD	 Shift + 9
 10 CD	 Shift + 0
 11 CD	 Guide / EPG / -/--
 12 CD	 Fav / Marker / PC
 13 CD	 Shift + Guide / EPG / -/--
 14 CD	 Shift + Fav / Marker / PC
 15 CD	 Display / Media
 16 CD	 Shift + Display / Media
 Stop Deck A	 Shift + Stop /
 << Deck A	 << / Tune-
 >> Deck A	 >> / Tune+
 > Deck A	 Right
 < Deck A	 Left
 Pause Deck B	 Shift + Pause / Step /
 Rec Pause Deck B	 Shift + Rec / Rec Mode
 Rec Deck B	 Rec / Rec Mode
 Stop Deck B	 OK

Original	Replacement
 > Deck B	 Up
 < Deck B	 Down
 << Deck B	 CH- / Page-
 >> Deck B	 CH+ / Page+

