

 



 



 

 

 



 





 

 



 















 






 




 









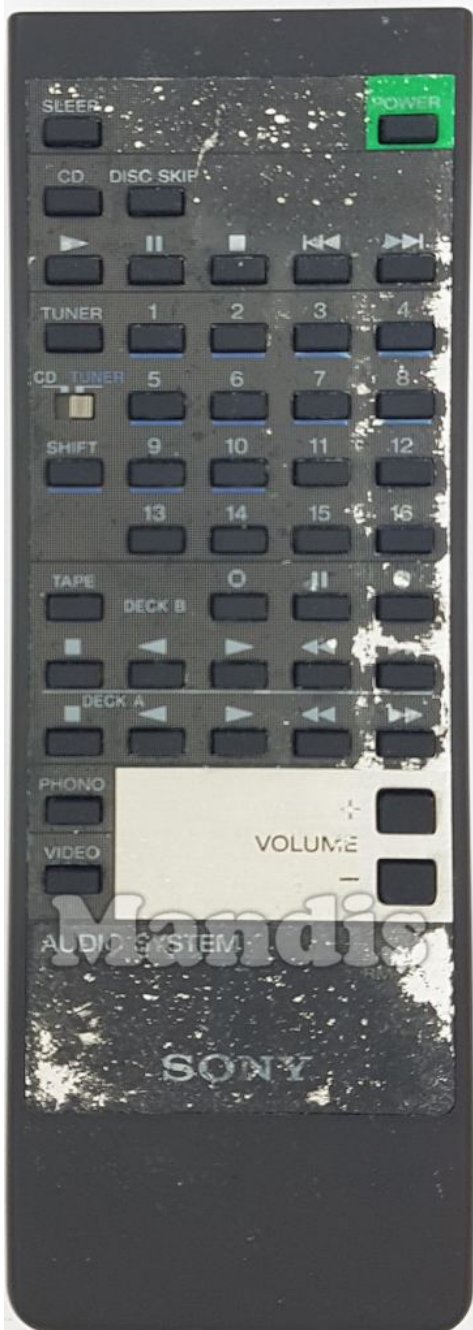 


| Original   | Replacement   | Original   | Replacement  |
|--|---|--|--|
|  Power      |  Power                       |  3 Tuner  |  3            |
|  Sleep      |  Sleep / Timer               |  4 Tuner  |  4            |
|  Phono      |  Red / Netflix / Search      |  5 Tuner  |  5            |
|  Video      |  Blue / Prime Video / Random |  6 Tuner  |  6            |
|  Tape       |  Green / APP / Repeat        |  7 Tuner  |  7            |
|  Tuner      |  TV/Radio /                  |  8 Tuner  |  8            |
|  CD         |  Yellow / YouTube / Repeat   |  9 Tuner  |  9            |
|  Volume+    |  Vol+                        |  10 Tuner |  0            |
|  Volume-    |  Vol-                        |  Shift    |  Smart / List |
|  Disc Skip  |  Zoom / Size                 |  1 CD     |  Shift + 1    |
|  Play CD   |  Play / Slow                |  2 CD    |  Shift + 2   |
|  Pause CD |  Pause / Step / Freeze     |  3 CD   |  Shift + 3  |
|  Stop CD  |  Stop / Hold               |  4 CD   |  Shift + 4  |
|  I<< CD   |  I<< / Preset-             |  5 CD   |  Shift + 5  |
|  >>I CD   |  >>I / Preset+             |  6 CD   |  Shift + 6  |
|  1 Tuner  |  1                         |  7 CD   |  Shift + 7  |
|  2 Tuner  |  2                         |  8 CD   |  Shift + 8  |





| Original         | Replacement                |
|------------------|----------------------------|
| 9 CD             | Shift + 9                  |
| 10 CD            | Shift + 0                  |
| 11 CD            | Guide / EPG / -/--         |
| 12 CD            | Fav / Marker / PC          |
| 13 CD            | Shift + Guide / EPG / -/-- |
| 14 CD            | Shift + Fav / Marker / PC  |
| 15 CD            | Display / Media            |
| 16 CD            | Shift + Display / Media    |
| Stop Deck A      | Shift + Stop /             |
| << Deck A        | << / Tune-                 |
| >> Deck A        | >> / Tune+                 |
| > Deck A         | Right                      |
| < Deck A         | Left                       |
| Pause Deck B     | Shift + Pause / Step /     |
| Rec Pause Deck B | Shift + Rec / Rec Mode     |
| Rec Deck B       | Rec / Rec Mode             |
| Stop Deck B      | OK                         |

| Original  | Replacement |
|-----------|-------------|
| > Deck B  | Up          |
| < Deck B  | Down        |
| << Deck B | CH- / Page- |
| >> Deck B | CH+ / Page+ |
|           |             |
|           |             |
|           |             |
|           |             |
|           |             |
|           |             |
|           |             |
|           |             |
|           |             |
|           |             |
|           |             |
|           |             |
|           |             |
|           |             |
|           |             |
|           |             |
|           |             |

