
 


 
























 












Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 FAV	 Fav / Marker / PC

Original	Replacement
 Vol+	 Vol+
 MTS /II	 Audio / Lang I/II
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Sub-T	 Subtitle / EQ
 CH-	 CH- / Page-
 Aspect	 Zoom / Size
 Freeze	 Shift + Pause / Step /
 Sleep	 Sleep / Timer
 Source	 AV / Input / RDS
 Up	 Up
 Display	 Display / Media
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down





Original	Replacement
	Exit / Cancel / Clear
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	<< / Text/CC
	<< / Tune-
	<< / Text/CC
	Text / Goto
	Pause / Step / Freeze
	Play / Slow
	>> / Reveal
	>> / Tune+
	I<< / Hold
	I<< / Preset-
	>>I / Size
	>>I / Preset+
	Stop / Index
	Stop / Hold
	Setup / OPT /
	Repeat
	Shift + Green / APP /
	Smart / List
	D.Menu / Top

Original	Replacement
	Rec / Rec Mode
	Guide / EPG / -/-

