







































 

 

 



Original	Replacement
 Standby	 Power
 Mute	 Mute / Dimmer
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Red / UHF	 Red / Netflix / Search
 Green / Audio	 Green / APP / Repeat
 Green / Audio	 Audio / Lang I/II
 Yellow / Pause	 Yellow / YouTube / Repeat
 Yellow / Pause	 Pause / Step / Freeze
 Blue / Recall	 Blue / Prime Video / Random
 Blue / Recall	 Back / Return
 1	 1

Original	Replacement
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 EPG	 Guide / EPG / -/-
 Group	 Smart / List
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Page+	 Shift + CH+ /
 Page-	 Shift + CH- /

Page-





	Original	Replacement		Original	Replacement
	Info	 Info / Angle			
	STB / TV	 AV / Input / RDS			
	Text	 Text / Goto			
	SUBT	 Subtitle / EQ			

	Original	Replacement		Original	Replacement

