 

 

 

 

 

 

 

 

 

 



 

 



 









| Original | Replacement |
|---|---|
|  Power |  Power |
|  Open / Close |  Eject / Surround |
|  AUX / MP3 Link |  Shift + 7 |
|  Radio |  Shift + 6 |
|  Radio |  TV/Radio / |
|  USB |  Shift + 8 |
|  DOCK |  Shift + 2 |
|  Disc |  Shift + 3 |
|  Info |  Info / Angle |
|  Up |  Up |
|  Left/Left-Left |  Left-Left / Tune- |
|  Left/Left-Left |  Left |
|  OK |  OK |
|  Right/Right-Right |  Right-Right / Tune+ |
|  Right/Right-Right |  Right |
|  Menu/Back |  Back / Return |
|  Menu/Back |  Menu / Home |

| Original | Replacement |
|--|--|
|  Down |  Down |
|  Options |  Setup / OPT / |
|  I< |  I<< / Preset- |
|  Play/pause |  Play / Slow |
|  >I |  >>I / Preset+ |
|  Mute |  Mute / Dimmer |
|  Stop |  Stop / Hold |
|  Vol+ |  Vol+ |
|  Surround |  Shift + Eject / Surround |
|  Sound Modes+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  Sound Modes- |  CH- / Page- |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |



