

 












 





Original	Replacement
	Power
	Top Menu
	View/Bonus
	Repeat
	HDMI
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Menu / Home
	Home
	Options
	Back
	[i]/Info
	Up
	Down
	Left

Original	Replacement
	Right
	OK
	Left
	Play
	Pause
	Right
	Left
	Stop
	Right
	Vol+
	Vol-
	Mute
	Open/Close
	Tv CH+
	Tv CH-
	1
	2





	Original	Replacement	Original	Replacement
	3	3		
	4	4		
	5	5		
	6	6		
	7	7		
	8	8		
	9	9		
	0	0		
	Subtitle	Subtitle / EQ		
	Audio	Audio / Lang I/II		

