



Original		Replacement		Original		Replacement	
	Power		Power		Play		Play / Slow
	Sleep		Sleep / Timer		Pause		Pause / Step / Freeze
	Display		Display / Media		Stop		Stop / Hold
	Tuner Memory		Zoom / Size		Clear		Exit / Cancel / Clear
	Play Mode/Tuning Mode		TV/Radio /		EQ		Subtitle / EQ
	Folder-		CH- / Page-		Vol+		Vol+
	Repeat/FM		Picture / Format		Vol-		Vol-
	Clock/Timer		Up		Enter		OK
	Clock/Timer Set		Down		Disk Skip		Fav / Marker / PC
	Audio In		Audio / Lang I/II		Folder+		CH+ / Page+
	CD		3				
	Band/Tuner		Shift + TV/Radio / Program				
	Function		D.Menu / Top				
	I<</-		I<< / Preset-				
	>>I/+		>>I / Preset+				
	<</<		<< / Tune-				
	>>/>		>> / Tune+				

