 









 

 

 











 



 

 



 






























 
















 





 















Original	Replacement
 Open/Close	 Eject / Surround
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Search	 Red / Netflix / Search
 Angle	 Info / Angle
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Pause	 Pause / Step / Freeze

Original	Replacement
 Play	 Play / Slow
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 <<	 << / Tune-
 >>	 >> / Tune+
 >>I	 >>I / Preset+
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Top Menu	 D.Menu / Top
 Down	 Down
 Menu	 Menu / Home
 Clear	 Exit / Cancel / Clear
 Display	 Display / Media
 Return	 Back / Return
 Mode	 Text / Goto





Original	Replacement	Original	Replacement
 Open/Close	 Eject / Surround	 Play	 Play / Slow
 Power	 Power	 Stop	 Stop / Hold
 1	 1	 I<<	 I<< / Preset-
 2	 2	 <<	 << / Tune-
 3	 3	 >>	 >> / Tune+
 4	 4	 >>I	 >>I / Preset+
 5	 5	 Up	 Up
 6	 6	 Left	 Left
 7	 7	 Enter	 OK
 8	 8	 Right	 Right
 9	 9	 Top Menu	 D.Menu / Top
 0	 0	 Down	 Down
 Search	 Red / Netflix / Search	 Menu	 Menu / Home
 Angle	 Info / Angle	 Clear	 Exit / Cancel / Clear
 Subtitle	 Subtitle / EQ	 Display	 Display / Media
 Audio	 Audio / Lang I/II	 Return	 Back / Return
 Pause	 Pause / Step / Freeze	 Mode	 Text / Goto



