


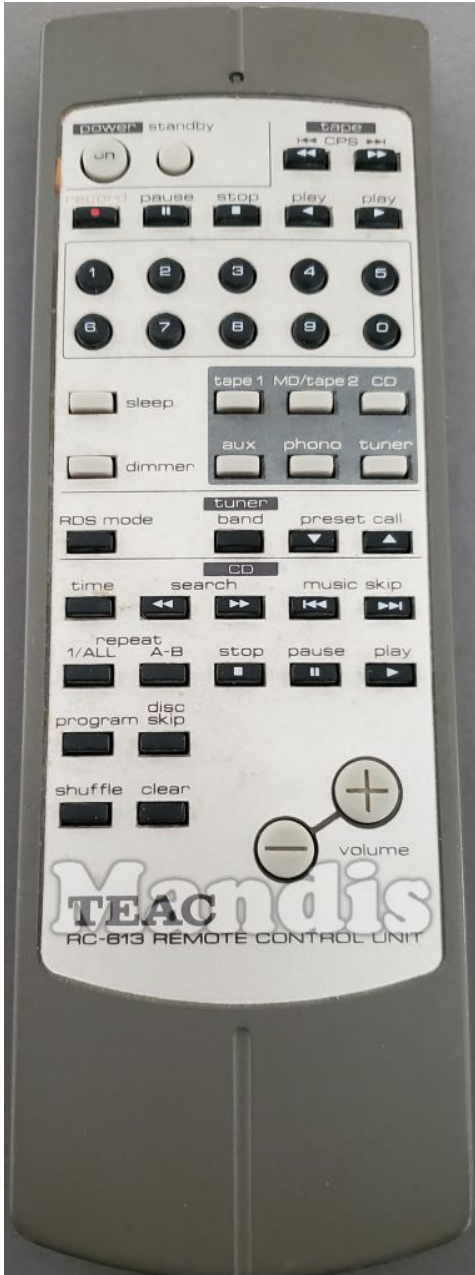
















Original	Replacement	Original	Replacement
POWER ON	Power	0	0
Standby	Shift + Power	SLEEP	Sleep / Timer
TAPE >>	Up	TAPE 1	Shift + 5
TAPE RECORD	Info / Angle	MD / TAPE 2	Shift + 2
TAPE PAUSE	Back / Return	CD	Shift + 3
TAPE STOP	OK	DIMMER	Shift + Mute / Dimmer
TAPE PLAY <	Left	AUX	Shift + 7
TAPE PLAY >	Right	PHONO	Shift + 1
1	1	TUNER	Shift + 6
2	2	RDS MODE	Display / Media
3	3	BAND	Smart / List
4	4	PRESET CALL	CH- / Page-
5	5	PRESET CALL	CH+ / Page+
6	6	TIME	Shift + Sleep / Timer
7	7	CD <<	<< / Tune-
8	8	CD >>	>> / Tune+
9	9	CD <<	<< / Preset-





	Original	Replacement	Original	Replacement
	 skip CD >>	 PRESET+ >> / Preset+		
	 REPEAT 1/ALL	 Green / APP / Repeat		
	 REPEAT A-B	 Yellow / YouTube / Repeat		
	 CD STOP	 Stop / Hold		
	 CD PAUSE	 Pause / Step / Freeze		
	 CD PLAY	 Play / Slow		
	 PROGRAM	 TV/Radio /		
	 DISC SKIP	 Rec / Rec Mode		
	 SHUFFLE	 Blue / Prime Video / Random		
	 CLEAR	 Exit / Cancel / Clear		
	 VOLUME+	 Vol+		
	 VOLUME-	 Vol-		
	 MUTE	 Mute / Dimmer		
	 SURROUND	 Eject / Surround		
	 TEST TONE	 Text / Goto		
	 TUNE +	 Shift + >> /		
	 TUNE -	 Shift + << /		

Tune-

