






 
 














 
 





| Original | Replacement |
|---|--|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 / Sleep |  0 |
|  0 / Sleep |  Sleep / Timer |
|  TV/Rad |  TV/Radio / |
|  TV / SAT |  AV / Input / RDS |
|  CH+ |  CH+ / Page+ |
|  CH- |  CH- / Page- |

| Original | Replacement |
|---|--|
|  Vol+ |  Vol+ |
|  Vol- |  Vol- |
|  Menu |  Menu / Home |
|  Recall |  Back / Return |
|  P+ |  Shift + CH+ / |
|  P- |  Shift + CH- / |
|  Text |  Text / Goto |
|  Exit |  Exit / Cancel / Clear |
|  Fav |  Fav / Marker / PC |
|  EPG |  Guide / EPG / -/-- |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Red / V-FMT |  Red / Netflix / Search |
|  Red / V-FMT |  Picture / Format |





| Original | Replacement |
|--|---|
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue / Timer |  Blue / Prime Video / Random |
|  Blue / Timer |  Shift + Sleep / Timer |
|  Info |  Info / Angle |
|  Subt |  Subtitle / EQ |
|  Audio |  Audio / Lang I/II |
|  Find |  Shift + Red / Netflix / |
|  Rec |  Rec / Rec Mode |
|  Stop |  Stop / Hold |
|  Play |  Play / Slow |
|  Pause |  Pause / Step / Freeze |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  I<< |  I<< / Preset- |
|  >>I |  >>I / Preset+ |
|  < |  Shift + Left |

| Original | Replacement |
|---|---|
|  II> |  Shift + Right |
|  Movie |  Smart / List |
|  USB |  Shift + 8 |
|  USB |  Display / Media |

