



Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 TXT	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Replacement
 Guide	 Guide / EPG / -/--
 ?	 TV/Radio /
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Back	 Back / Return
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Tools	 Setup / OPT /
 Down	 Down
 @	 Smart / List
 Vol+	 Vol+
 Input	 AV / Input / RDS
 P+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer





Original		Replacement		Original		Replacement	
	P-		CH- / Page-				
	I<		I<< / Preset-				
	>I		>>I / Preset+				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				
	3D		Zoom / Size				
	O...		Audio / Lang I/II				
	[...]		Subtitle / EQ				
	Netflix		Shift + Red / Netflix /				
	My Media		Display / Media				

