 


 







 


 





Original		Replacement		Original		Replacement	
	Open/Close		Eject / Surround		Channel+		CH+ / Page+
	Sleep		Sleep / Timer		DBB/Tone		Display / Media
	Clock		Shift + Sleep / Timer		Vol+		Vol+
	Power		Power		Channel-		CH- / Page-
	CD		Shift + 3		Mute		Mute / Dimmer
	USB		Shift + 8		Vol-		Vol-
	Bluetooth		Shift + 9		Info		Info / Angle
	Tuner		Shift + 6		Up/Tune+		Up
	Analog In		Shift + 5		Option		Shift + Setup / OPT / Tools
	Optical In		Smart / List		Left		Left
	I<<		I<< / Preset-		Enter		OK
	Play		Play / Slow		Right		Right
	Pause		Pause / Step / Freeze		Search		Red / Netflix / Search
	>>I	>>I / Preset+ button"/>	>>I / Preset+		Down/Tune-		Down
	Speaker A/B		Audio / Lang I/II		Setup		Setup / OPT /
	Stop		Stop / Hold		1		1
	Volume A/B		Subtitle / EQ		2		2





Original	Replacement	Original	Replacement
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/--
	0		0
	Clear		Exit / Cancel / Clear
	Random		Blue / Prime Video / Random
	Repeat		Green / APP / Repeat
	Program		TV/Radio /
	Dimmer		Shift + Mute / Dimmer

