










 



 




 
 



 









 



 

 

 






 

 

 

 

 

 

 

 

 

 

 





 



 









 



Original	Replacement
 Open / Close	 Eject / Surround
 Set Up	 Setup / OPT /
 Mute	 Mute / Dimmer
 On / Stand-by	 Power
 Title	 Sound / Title
 Subtitle	 Subtitle / EQ
 Language	 Shift + Audio / Lang I/II
 Display	 Display / Media
 DVD	 Shift + 2
 TUNER	 Shift + 6
 AUX	 Shift + 7
 Menu / PBC	 Menu / Home
 Up	 Up
 St/Mo	 Shift + Sound / Title
 Left	 Left
 Enter	 OK
 Right	 Right

Original	Replacement
 Prog	 TV/Radio /
 Down	 Down
 Sleep	 Sleep / Timer
 Slow / Memory	 Shift + Play /
 Play / Pause	 Play / Slow
 Stop	 Stop / Hold
 << / Preset-	 << / Tune-
 << / Preset-	 Shift + I<< / Preset-
 >> / Preset+	 >> / Tune+
 >> / Preset+	 Shift + >>I / Preset+
 I<< / Tuning-	 I<< / Preset-
 I<< / Tuning-	 Shift + << /
 >>I / Tuning+	 Shift + >> /
 >>I / Tuning+	 >>I / Preset+
 Listening	 D.Menu / Top
 Mode	 Smart / List
 Adj/Vol-	 Vol-





Original	Replacement
 Adj/Vol+	 Vol+
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 >10	 Guide / EPG / -/--
 Step	 Pause / Step / Freeze
 Direct	 AV / Input / RDS
 Return	 Back / Return
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat

Original	Replacement
 Angle	 Info / Angle
 Zoom	 Zoom / Size
 Audio	 Audio / Lang I/II
 NTSC/PAL	 Picture / Format

