







Original	Replacement
 Standby	 Power
 Open / Close	 Eject / Surround
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 Subtitle	 Subtitle / EQ
 4	 4
 5	 5
 6	 6
 Angle	 Info / Angle
 7	 7
 8	 8
 9	 9
 Prog	 TV/Radio /
 Goto	 Text / Goto
 10/0	 0

Original	Replacement
 10+	 Guide / EPG / -/--
 Audio	 Audio / Lang I/II
 Display	 Display / Media
 Return	 Back / Return
 Setup	 Setup / OPT /
 Zoom	 Zoom / Size
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Title	 Sound / Title
 Down	 Down
 Menu	 Menu / Home
 N/P	 Picture / Format
 USB	 Shift + 8
 Play / Pause	 << / Tune-
 Play / Pause	 Play / Slow





Original		Replacement		Original		Replacement	
	Play / Pause		Pause / Step / Freeze				
	I <<		I << / Preset-				
	>>		>> / Tune+				
	Stop		Stop / Hold				
	>>I		>>I / Preset+				
	Repeat		Green / APP / Repeat				
	A-B		Yellow / YouTube / Repeat				
	Resume		Rec / Rec Mode				
	L/R		D.Menu / Top				
	Step		Shift + Pause / Step /				
	Video Out		AV / Input / RDS				
	Clear		Exit / Cancel / Clear				
	Vol+		Vol+				
	Slow		Shift + Play /				
	Shuffle		Blue / Prime Video / Random				
	PBC		Smart / List				
	Vol-		Vol-				

