



































 



































Original		Replacement		Original		Replacement	
	Mute		Mute / Dimmer		Normal		Smart / List
	Power		Power		Input		AV / Input / RDS
	1		1		Up		Up
	2		2		PR+		CH+ / Page+
	3		3		OK [=i]		OK
	3D		Picture / Format		Left		Left
	4		4		Vol-		Vol-
	5		5		Menu		Menu / Home
	6		6		Right		Right
	Mode		D.Menu / Top		Vol+		Vol+
	7		7		[=x]		Subtitle / EQ
	8		8		PR-		CH- / Page-
	9		9		Down		Down
	Zoom		Zoom / Size		[=]		Text / Goto
	Timer		Sleep / Timer		[=+]		Setup / OPT /
	0		0		[=o]		Audio / Lang I/II
	[ + ]		Info / Angle		[=?]		Display / Media



