

 

































 



 



 



 


















Original		Replacement		Original		Replacement	
	Power		Power		Pause / Still		Pause / Step / Freeze
	1		1		Left / <<		Left
	2		2		Left / <<		<< / Tune-
	3		3		Left / <<		I<< / Preset-
	4		4		Right / >>		Right
	5		5		Right / >>		>>I / Preset+
	6		6		Right / >>		>> / Tune+
	7		7		Down / Stop		Down
	8		8		Down / Stop		Stop / Hold
	9		9		Enter		OK
	0 / AV		0		Index		Info / Angle
	0 / AV		AV / Input / RDS		Cancel		Exit / Cancel / Clear
	CH/TR. +		CH+ / Page+		Menu		Menu / Home
	CH/TR. -		CH- / Page-		Timer Rec		Sleep / Timer
	Rec / OTR		Rec / Rec Mode		Program		TV/Radio /
	Up / Play		Up		Call		D.Menu / Top
	Up / Play		Play / Slow		Clock / Counter		Red / Netflix / Search





Original	Replacement
 Counter Reset	 Green / APP / Repeat
 Zero / Return	 Yellow / YouTube / Repeat
 Zero / Return	 Back / Return
 Speed SP/LP	 Display / Media
 TV / VCR	 Smart / List
 Eject	 Eject / Surround

Original	Replacement

