



 


 




 
 

 



 



 

 



 



 



 



 



 

 

 



 



 










Original	Replacement	Original	Replacement
 Power	 Power	 4	 4
 E3	 Shift + Guide / EPG / -/-	 5	 5
 E2	 Shift + 9	 6	 6
 Mute	 Mute / Dimmer	 L/R	 Audio / Lang I/II
 A1	 Shift + 1	 7	 7
 A2	 Shift + 2	 8	 8
 B1	 Shift + 3	 9	 9
 B2	 Shift + 4	 P/N	 Picture / Format
 C1	 Shift + 5	 Repeat	 Green / APP / Repeat
 C2	 Shift + 6	 0/10	 0
 D1	 Shift + 7	 10+	 Guide / EPG / -/-
 D2	 Shift + 8	 Zoom	 Zoom / Size
 EQ	 Subtitle / EQ	 TV-Mode	 TV/Radio /
 1	 1	 I<<	 I<< / Preset-
 2	 2	 >>I	 >>I / Preset+
 3	 3	 Stop	 Stop / Hold
 OSD	 Display / Media	 Play	 Play / Slow






 


 





 


 


 





 



 


 








 



 

 

 

 







Original	Replacement
	Pause / Step / Freeze
	<< / Tune-
	>> / Tune+
	Smart / List
	Up
	Menu / Home
	Left
	OK
	Right
	Back / Return
	Down
	Setup / OPT /
	Sound / Title
	Fav / Marker / PC
	Exit / Cancel / Clear
	CH+ / Page+
	Shift + CH+ / Page+

Original	Replacement
	Vol+
	AV / Input / RDS
	CH- / Page-
	Shift + CH- /
	Vol-



Page+



Original	Replacement	Original	Replacement
A1	 Shift + 1	 3	 3
A2	 Shift + 2	 OSD	 Display / Media
B1	 Shift + 3	 4	 4
B2	 Shift + 4	 5	 5
C1	 Shift + 5	 6	 6
C2	 Shift + 6	 L/R	 Audio / Lang I/II
D1	 Shift + 7	 7	 7
D2	 Shift + 8	 8	 8
 Power	 Power	 9	 9
E2	 Shift + Guide / EPG / -/--	 P/N	 Picture / Format
E3	 Shift + 0	 Repeat	 Green / APP / Repeat
E4	 Shift + Fav / Marker / PC	 0/10	 0
E1	 Shift + 9	 10+	 Guide / EPG / -/--
 Mute	 Mute / Dimmer	 Zoom	 Zoom / Size
 EQ	 Subtitle / EQ	 TV-Mode	 TV/Radio /
 1	 1	 I<<	 I<< / Preset-
 2	 2	 >>I	 >>I / Preset+





Original	Replacement
	Stop / Hold
	Play / Slow
	Pause / Step / Freeze
	<< / Tune-
	>> / Tune+
	Smart / List
	Up
	Menu / Home
	Left
	OK
	Right
	Back / Return
	Down
	Setup / OPT /
	Exit / Cancel / Clear
	CH+ / Page+
	+ Shift + CH+ / Page+

Original	Replacement
	Vol+
	AV / Input / RDS
	CH- / Page-
	+ Shift + CH- /
	Vol-



Page+