



Original	Replacement
Input	AV / Input / RDS
Power	Power
Amazon	Blue / Prime Video / Random
Netflix	Red / Netflix / Search
iHeart Radio	Setup / OPT /
<<<	<<< / Tune-
	Pause / Step / Freeze
▶	Play / Slow
>>>	>>> / Tune+
CC	Subtitle / EQ
Rec	Rec / Rec Mode
■	Stop / Hold
MENU	Menu / Home
EXIT	Exit / Cancel / Clear
INFO	Info / Angle
▲	Up
◀	Left

Original	Replacement
OK	OK
▶	Right
▼	Down
BACK	Back / Return
GUIDE	Guide / EPG / -/-
VOL +	Vol+
V	Display / Media
CH +	CH+ / Page+
VOL -	Vol-
CH -	CH- / Page-
Mute	Mute / Dimmer
[]	Zoom / Size
PIC	Picture / Format
Recall	Fav / Marker / PC
1	1
2	2
3	3



