

 







 



 

 



 



 

 





 

 

 



 











 

 

 



 

 



 





Original	Replacement
 Standby	 Power
 Open/close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 Subtitle	 Subtitle / EQ
 4	 4
 5	 5
 6	 6
 Angle	 Shift + Info / Angle
 7	 7
 8	 8
 9	 9
 Language	 Audio / Lang I/II
 0	 0
 +10	 Guide / EPG / -/-
 Video	 Shift + 4

Original	Replacement
 Program	 TV/Radio /
 Mute	 Mute / Dimmer
 N/P	 AV / Input / RDS
 Time	 Sleep / Timer
 OSD	 Display / Media
 Setup	 Setup / OPT /
 Up	 Up
 Title	 Sound / Title
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Return	 Back / Return
 USB/Card	 Smart / List
 Stop	 Stop / Hold
 Play	 Play / Slow





Original		Replacement		Original	Replacement
	Pause		Pause / Step / Freeze		
	<<		<< / Tune-		
	>>		>> / Tune+		
	I<<		I<< / Preset-		
	>>I		>>I / Preset+		
	A-B		Yellow / YouTube / Repeat		
	Repeat		Green / APP / Repeat		
	L/R		Red / Netflix / Search		
	Slow		Shift + Play /		
	Vol+		Vol+		
	Echo+		CH+ / Page+		
	Mic Vol+		Shift + CH+ /		
	Mic		Info / Angle		
	Vol-		Vol-		
	Echo-		CH- / Page-		
	Mic Vol-		Shift + CH- /		
	Zoom		Zoom / Size		

