 






 
 

 

 




 






 
 


 

 

 


 


 

 

 








 


 
 


 








 




 

 

 

 

 

 





 

 

 

 



 






Original	Replacement	Original	Replacement
 Open/Close	 Eject / Surround	 Stop	 Stop / Hold
 Sleep	 Sleep / Timer	 Volume A/B	 Red / Netflix / Search
 Clock	 Shift + Sleep / Timer	 ADD Favorites	 CH+ / Page+
 Power	 Power	 DBB/Tone	 Subtitle / EQ
 Internet Radio	 Display / Media	 Volume+	 Vol+
 USB	 Shift + 8	 Call Favorites	 CH- / Page-
 Music Servers	 Audio / Lang I/II	 Mute	 Mute / Dimmer
 Tuner	 Shift + 6	 Volume-	 Vol-
 Analog In	 AV / Input / RDS	 Queue	 Smart / List
 Optical In	 D.Menu / Top	 Up/Tune+	 Up
 CD	 Shift + 3	 Option/Program	 Setup / OPT /
 Bluetooth	 Shift + 9	 Left	 Left
 I<</CH-	 I<< / Preset-	 Enter	 OK
 Play	 Play / Slow	 Right	 Right
 Pause	 Pause / Step / Freeze	 Back	 Back / Return
 >>I/CH+	 >>I / Preset+	 Down/Tune-	 Down
 Speaker A/B	 Yellow / YouTube / Repeat	 Setup	 Menu / Home





	Original	Replacement	Original	Replacement
	1	 1		
	2	 2		
	3	 3		
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	+10	 Guide / EPG / -/--		
	0	 0		
	Clear	 Exit / Cancel / Clear		
	Random	 Blue / Prime Video / Random		
	Repeat	 Green / APP / Repeat		
	Dimmer	 +  Shift + Mute / Dimmer		
	Info	 INFO Info / Angle		

