





 
 



 



 




 















 



 
























































Original	Replacement	Original	Replacement
	Power		Power
	Display		Display / Media
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Menu		Menu / Home
	Music		Red / Netflix / Search
	Copy		Info / Angle
	Zoom		Zoom / Size
	Tv System		TV/Radio /
	Browser		D.Menu / Top
	Vol-		Vol-
	Vol+		Vol+
	Guide		Guide / EPG / -/-
	Return		Back / Return
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Time Shift		Sound / Title
	0		0
	Goto		Text / Goto
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold





Original	Replacement	Original	Replacement
 Timer	 Sleep / Timer		
 Pause/Step	 Pause / Step / Freeze		
 I>/Slow	 Fav / Marker / PC		
 I<</Prev	 I<< / Preset-		
 ReclList	 Smart / List		
 ←/INS Replay	 CH- / Page-		
 →/CM Skip	 CH+ / Page+		
 >>I/Next	 >>I / Preset+		
 A-B	 Yellow / YouTube / Repeat		
 Subtitle	 Subtitle / EQ		
 Repeat	 Green / APP / Repeat		
 <</FR	 << / Tune-		
 F1	 Blue / Prime Video / Random		
 Source	 AV / Input / RDS		
 Audio	 Audio / Lang I/II		
 >>/FF	 >> / Tune+		

Original	Replacement	Original	Replacement

