





 

 

 



 

 




















Original	Replacement	Original	Replacement
 Power	 Power	 Sleep	 Sleep / Timer
 Mute	 Mute / Dimmer	 Vol+	 Vol+
 1	 1	 Vol-	 Vol-
 2	 2	 CH+	 CH+ / Page+
 3	 3	 CH-	 CH- / Page-
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 Enter	 OK
 9	 9	 Menu	 Menu / Home
 0	 0	 Exit	 Exit / Cancel / Clear
 -/--	 Guide / EPG / -/--	 P.Mode	 Picture / Format
 Recall	 Fav / Marker / PC	 S.Mode	 Sound / Title
 Disp	 Display / Media	 Auto	 Smart / List
 Input	 AV / Input / RDS	 Angle	 Info / Angle
 Zoom	 Zoom / Size	 I<<	 I<< / Preset-





Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Red/Setup	 Guide / EPG / Red/Setup
 Recall	 Fav / Marker / PC
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+

Original	Replacement
 CH-	 CH- / Page-
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 OK
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Zoom	 Zoom / Size
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Angle	 Info / Angle
 Red/Setup	 Red / Netflix / Search
 Green/Menu	 Green / APP / Repeat
 Yellow/Title	 Yellow / YouTube / Repeat
 Blue/Lang	 Blue / Prime Video / Random
 Disp	 Display / Media

