






















 










Original	Replacement
	 Power
	 Subtitle / EQ
	 Audio / Lang I/II
	 Mute / Dimmer
	 Guide / EPG / -/--
	 Shift + Text /
	 CH+ / Page+
	 Text / Goto
	 Shift + Green / APP /
	 CH- / Page-
	 Menu / Home
	 Up
	 Exit / Cancel / Clear
	 Left
	 Vol-
	 OK
	 Right

Original	Replacement
	 Vol+
	 Fav / Marker / PC
	 Down
	 TV/Radio /
	 1
	 2
	 3
	 Back / Return
	 4
	 5
	 6
	 Info / Angle
	 7
	 8
	 9
	 0
	 << / Tune-



