


















 
















Original	Replacement	Original	Replacement
On/Off	 Power	Off/Tim	 Setup / OPT /
Mute	 Mute / Dimmer	Text	 Text / Goto
Reveal	 Play / Slow	TV/AV	 AV / Input / RDS
Update	 Pause / Step / Freeze	Menu	 Menu / Home
Txt Stop	 Stop / Hold	Menu Up	 Up
Tune-	 << / Tune-	Info	 Info / Angle
Tone+	 >> / Tune+	Menu Left	 Left
Game Coo	 I<< / Preset-	OK Enter	 OK
Aft/Caf	 Sound / Title	Menu Right	 Right
Menu audio	 Audio / Lang I/II	Menu Off	 Exit / Cancel / Clear
Subt.List	 Subtitle / EQ	Menu Down	 Down
Store	 Eject / Surround	Back	 Back / Return
Browse	 Picture / Format	Volume+	 Vol+
Txt Expand	 Zoom / Size	Display	 Smart / List
Sleep Timer	 Sleep / Timer	Chan.Up	 CH+ / Page+
Return TV	 TV/Radio /	Volume-	 Vol-
Menu video	 D.Menu / Top	Disp	 Display / Media



