











 






Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Quality/P-	 CH- / Page-
 0	 0
 Recall/P+	 CH+ / Page+
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up

Original	Replacement
 Left	 Left
 OK	 OK
 Right	 Right
 Sel	 Smart / List
 Down	 Down
 FAV	 Fav / Marker / PC
 Audio	 Audio / Lang I/II
 Pause	 Pause / Step / Freeze
 Red/TXT	 Red / Netflix / Search
 AV	 AV / Input / RDS
 TV/R	 TV/Radio /
 Blue/Sound	 Blue / Prime Video / Random
 Green/Zoom	 Green / APP / Repeat
 Yellow/EPG	 Yellow / YouTube / Repeat

