







































Original	Replacement	Original	Replacement
On/Off	 Power	Menu Down	 Down
Mute	 Mute / Dimmer	Volume+	 Vol+
Update	 Play / Slow	Chan.Up	 CH+ / Page+
Reveal	 Pause / Step / Freeze	Volume-	 Vol-
Menu audio	 Audio / Lang I/II	Display	 Display / Media
Subt.List	 Subtitle / EQ	Chan.Down	 CH- / Page-
Txt Expand	 Zoom / Size	1	 1
Sleep Timer	 Sleep / Timer	2	 2
Return TV	 TV/Radio /	3	 3
Menu video	 D.Menu / Top	4	 4
Text	 Text / Goto	5	 5
Menu	 Menu / Home	6	 6
Menu Up	 Up	7	 7
Info	 Info / Angle	8	 8
Menu Left	 Left	9	 9
OK Enter	 OK	Guide -/-- 1.	 Guide / EPG / -/--
Menu Right	 Right	0/10	 0



Original	Replacement	Original	Replacement
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		

