



| Original | Replacement | Original | Replacement |
|--|---|--|---|
|  Power |  Power |  Dev.List |  Display / Media |
|  Mute |  Mute / Dimmer |  EPG |  Guide / EPG / -/- |
|  1 |  1 |  Subtitle |  Subtitle / EQ |
|  2 |  2 |  Text |  Text / Goto |
|  3 |  3 |  Auto |  Setup / OPT / |
|  Lang |  Audio / Lang I/II |  Menu |  Menu / Home |
|  4 |  4 |  Zoom |  Zoom / Size |
|  5 |  5 |  Info |  Info / Angle |
|  6 |  6 |  Exit |  Exit / Cancel / Clear |
|  Time Shift |  D.Menu / Top |  Up |  Up |
|  7 |  7 |  CH+ |  CH+ / Page+ |
|  8 |  8 |  Left |  Left |
|  9 |  9 |  Vol- |  Vol- |
|  Tv/Radio |  TV/Radio / |  OK |  OK |
|  FAV |  Fav / Marker / PC |  Right |  Right |
|  0 |  0 |  Vol+ |  Vol+ |
|  Recall |  Back / Return |  CH- |  CH- / Page- |





| Original | Replacement | Original | Replacement |
|--------------------|-----------------------------|----------|-------------|
| Down | Down | | |
| Filelist | Smart / List | | |
| Rec | Rec / Rec Mode | | |
| Stop | Stop / Hold | | |
| Play | Play / Slow | | |
| Pause | Pause / Step / Freeze | | |
| << | << / Tune- | | |
| >> | >> / Tune+ | | |
| I<< | I<< / Preset- | | |
| >>I | >>I / Preset+ | | |
| Red/FAV/Daily | Red / Netflix / Search | | |
| Green/DEL/Weekl | Green / APP / Repeat | | |
| Yellow/Movie/P.Inf | Yellow / YouTube / Repeat | | |
| Blue/Look/Timer | Blue / Prime Video / Random | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

