


 













 







 


























Original	Replacement
 Aper / Chiuso	 Eject / Surround
 Video / Y	 AV / Input / RDS
 Power	 Power
 OSD	 Display / Media
 PBC	 D.Menu / Top
 Titolo	 Sound / Title
 Menu	 Menu / Home
 Ricerca	 Red / Netflix / Search
 1	 1
 2	 2
 3	 3
 Repeticione	 Green / APP / Repeat
 4	 4
 5	 5
 6	 6
 A-B RPT	 Yellow / YouTube / Repeat
 7	 7

Original	Replacement
 8	 8
 9	 9
 Prog	 TV/Radio /
 Intro	 Smart / List
 0	 0
 10+	 Guide / EPG / -/-
 Pausa	 Pause / Step / Freeze
 Info / Play	 Play / Slow
 Info / Play	 Info / Angle
 Up	 Up
 Left	 Left
 Setup	 Setup / OPT /
 Right	 Right
 Ritorno	 Back / Return
 Down	 Down
 Stop	 Stop / Hold
 <I Ralent	 CH- / Page-





Original	Replacement	Original	Replacement
 Ralent I>	 CH+ / Page+		
 << F.REV	 << / Tune-		
 >> F.FWD	 >> / Tune+		
 Step	 Shift + Pause / Step /		
 Zoom	 Zoom / Size		
 I<< Prec	 I<< / Preset-		
 >>I Succ	 >>I / Preset+		
 Sottotitoli	 Subtitle / EQ		
 NTSC/PAL	 Picture / Format		
 Volume-	 Vol-		
 Volume+	 Vol+		
 Sleep / Timer	 Sleep / Timer		
 Track	 Text / Goto		
 Audio	 Audio / Lang I/II		
 Mute	 Mute / Dimmer		

Original	Replacement	Original	Replacement

