

















 










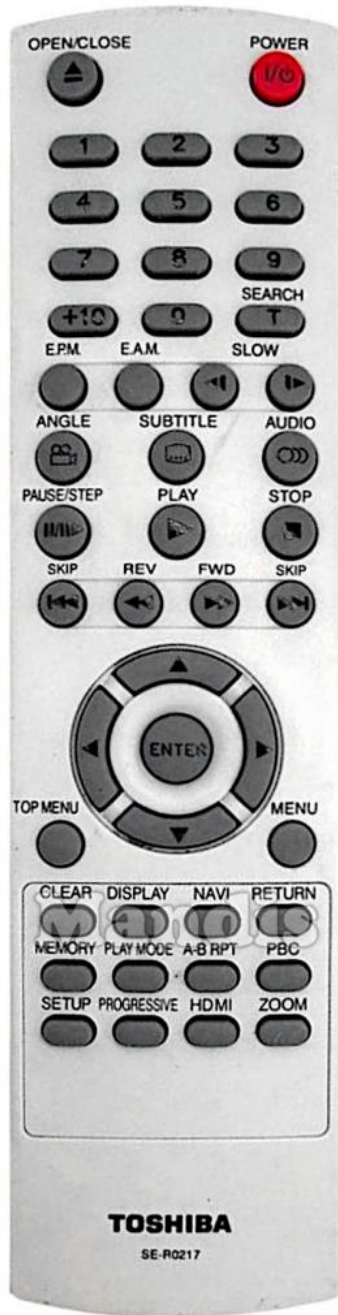



 


 







Original	Replacement
 Open/Close	 Eject / Surround
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 10	 Guide / EPG / -/--
 0	 0
 T/Search	 Red / Netflix / Search
 EPM	 Picture / Format
 EAM	 Sound / Title
 <I Slow	 CH- / Page-

Original	Replacement
 Slow I>	 CH+ / Page+
 Angle	 Info / Angle
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Pause/Step	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 I<< Skip	 I<< / Preset-
 <</REV	 << / Tune-
 FWD/>>	 >> / Tune+
 Skip >>I	 >>I / Preset+
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Top Menu	 D.Menu / Top
 Down	 Down





	Original	Replacement	Original	Replacement
	 Menu	 Menu / Home		
	 Clear	 Exit / Cancel / Clear		
	 Display	 Display / Media		
	 Navi	 Smart / List		
	 Return	 Back / Return		
	 Memory	 Fav / Marker / PC		
	 Play Mode	 Shift + Play /		
	 A-B RPT	 Yellow / YouTube / Repeat		
	 PBC	 Blue / Prime Video / Random		
	 Setup	 Setup / OPT /		
	 Progressive	 Text / Goto		
	 HDMI	 Shift + 0		
	 HDMI	 AV / Input / RDS		
	 Zoom	 Zoom / Size		

