



 

 

 

 







 









 



 



 





 

 

 

 















 

 





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Stop		Stop / Hold
	I/II		Audio / Lang I/II
	[ * ]		Subtitle / EQ
	16:9		Picture / Format
	Timer		Sleep / Timer
	TV		TV/Radio /
	[ ]		Setup / OPT /
	TXT		Text / Goto
	AV		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Index		Info / Angle
	Left		Left
	Exit		Exit / Cancel / Clear
	Down		Down
	Vol+		Vol+
	Mix		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	<>		Display / Media
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	?		Fav / Marker / PC



