 

 
 
 



 













































 

 



 











Original	Replacement	Original	Replacement
 Power	 Power	 CH.List	 CH.List
 Info	 Info / Angle	 [=]	 D.Menu / Top
 Input	 AV / Input / RDS	 Up	 Up
 [++]	 Setup / OPT /	 Colors	 Fav / Marker / PC
 [1]	 Picture / Format	 Left	 Left
 [2]	 Zoom / Size	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Back	 Back / Return
 3	 3	 Down	 Down
 4	 4	 Play	 Play / Slow
 5	 5	 Pause	 Pause / Step / Freeze
 6	 6	 Vol+	 Vol+
 7	 7	 Home	 Menu / Home
 8	 8	 CH+	 CH+ / Page+
 9	 9	 Vol-	 Vol-
 Guide	 Guide / EPG / -/-	 Mute	 Mute / Dimmer
 0	 0	 CH-	 CH- / Page-





Original	Replacement
TXT	Text / Goto
Voice	Audio / Lang I/II
Sub.	Subtitle / EQ
Netflix	Red / Netflix / Search
YouTube	Yellow / YouTube / Repeat
Prime Video	Blue / Prime Video / Random
Rakuten Tv	TV/Radio /

Original	Replacement

