











Original	Replacement
 St andby	 Power
 Sl eep	 Sl eep / Ti ner
 Mut e	 Mut e / Di mmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 - / - -	 Gui de / EPG / - / - -
 0	 0
 Q. Vi ew	 Fav / Marker / PC
 P. Mbde	 Pi ctur e / Form at
 S. Mbde	 Sound / Ti tle

Original	Replacement
 AV/ TV	 AV / I nput / RDS
 Up / CH+	 Up
 Up / CH+	 CH+ / Page+
 Di spl ay	 Di spl ay / Medi a
 Left / Vol -	 Left
 Left / Vol -	 Vol -
 Menu	 Menu / Home
 Ri ght / Vol +	 Ri ght
 Ri ght / Vol +	 Vol +
 Down / CH-	 Down
 Down / CH-	 CH / Page-
 I / II	 Audi o / Lang I / II
 TXT	 Text / Got o
 Cancel	 Exi t / Cancel / Clear
 Si ze	 Zoom / Si ze
 M x	 Shi ft + Text /
 I ndex	 I nf o / Angl e





Original		Replacement	
	Reveal		TV/ Radi o /
	Subpage		Subt it le / EQ
	Hol d		St op / Hol d
	Red		Red / Netf lix / Search
	Green		Green / APP / Repeat
	Yel l ow		Yel l ow / YouT ube / Repeat
	Bl ue		Bl ue / Pri ne Vi deo / Random

Original		Replacement	

