


Original	Replacement
 Power	 Power
 Open/Close	 Eject / Surround
 OSD	 Display / Media
 1	 1
 2	 2
 3	 3
 Step	 Shift + Pause / Step /
 4	 4
 5	 5
 6	 6
 DVD/USB	 AV / Input / RDS
 7	 7
 8	 8
 9	 9
 Mute	 Mute / Dimmer
 0/10	 0
 10+	 Guide / EPG / -/--

Original	Replacement
 Time	 Sleep / Timer
 Title	 Sound / Title
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Enter	 OK
 Right	 Right
 Setup	 Setup / OPT /
 Down	 Down
 Zoom	 Zoom / Size
 I<<	 I<< / Preset-
 L/R	 Red / Netflix / Search
 N/P	 Blue / Prime Video / Random
 <<	 << / Tune-
 Vol-	 Vol-
 Vol+	 Vol+
 >>I	 >>I / Preset+

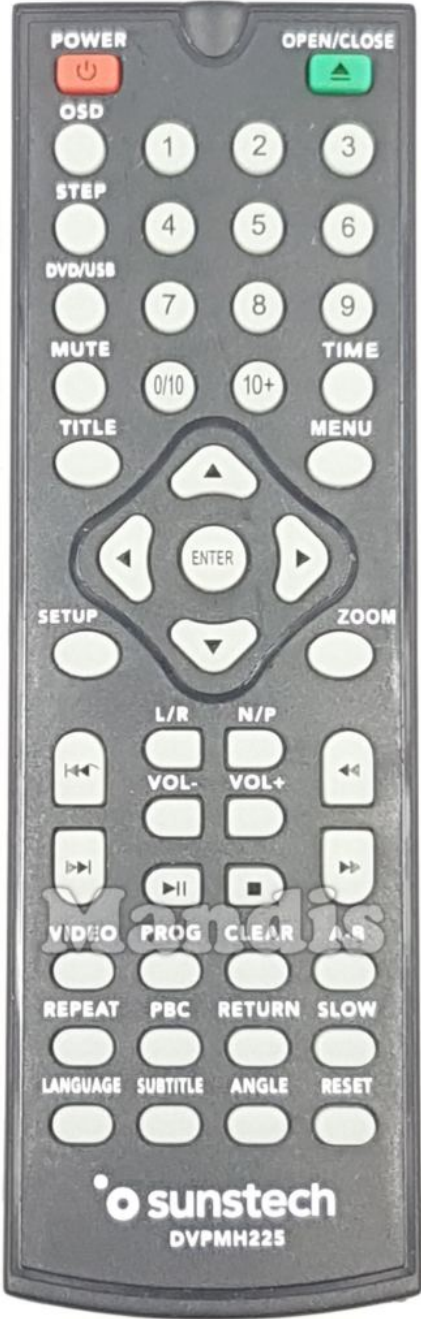



Original		Replacement		Original		Replacement	
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				
	>>		>> / Tune+				
	Video		Shift + 4				
	Prog		TV/Radio /				
	Clear		Exit / Cancel / Clear				
	A-B		Yellow / YouTube / Repeat				
	Repeat		Green / APP / Repeat				
	PBC		Text / Goto				
	Return		Back / Return				
	Slow		Shift + Play /				
	Language		Audio / Lang I/II				
	Subtitle		Subtitle / EQ				
	Angle		Info / Angle				
	Reset		Shift + Exit / Cancel / Clear				

