























































 



 











Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol+
 Sub-T	 Subtitle / EQ	 FAV	 Fav / Marker / PC
 Lang	 Audio / Lang I/II	 Down/CH-	 Down
 Mute	 Mute / Dimmer	 Tv/Radio	 TV/Radio /
 EPG	 Guide / EPG / -/--	 1	 1
 Goto	 Shift + Text /	 2	 2
 Page+	 CH+ / Page+	 3	 3
 TTX	 Text / Goto	 Recall	 Back / Return
 Repeat	 Shift + Green / APP /	 4	 4
 Page-	 CH- / Page-	 5	 5
 Menu	 Menu / Home	 6	 6
 Up/CH+	 Up	 Info	 Info / Angle
 Exit	 Exit / Cancel / Clear	 7	 7
 Vol-	 Vol-	 8	 8
 Left	 Left	 9	 9
 OK	 OK	 0	 0
 Right	 Right	 <<	 << / Tune-





	Original	Replacement	Original	Replacement
	>>	 >> / Tune+		
	<<	 << / Preset-		
	>>	 >> / Preset+		
	Play	 Play / Slow		
	Pause/Time Shift	 Pause / Step / Freeze		
	Stop	 Stop / Hold		
	Rec	 Rec / Rec Mode		
	Red/PVR	 Red / Netflix / Search		
	Green/V-Format	 Green / APP / Repeat		
	Yellow/Aspect	 Yellow / YouTube / Repeat		
	Blue/Timer	 Blue / Prime Video / Random		





Original	Replacement	Original	Replacement
Power	Power	Vol+	Vol+
Sub-T	Subtitle / EQ	FAV	Fav / Marker / PC
Lang	Audio / Lang I/II	Down/CH-	Down
Mute	Mute / Dimmer	Tv/Radio	TV/Radio /
EPG	Guide / EPG / -/--	1	1
Goto	Shift + Text /	2	2
Page+	CH+ / Page+	3	3
TTX	Text / Goto	Recall	Back / Return
Repeat	Shift + Green / APP /	4	4
Page-	CH- / Page-	5	5
Menu	Menu / Home	6	6
Up/CH+	Up	Info	Info / Angle
Exit	Exit / Cancel / Clear	7	7
Left	Left	8	8
Vol-	Vol-	9	9
OK	OK	0	0
Right	Right	<<	<< / Tune-





Original		Replacement		Original		Replacement	
	>>		>> / Tune+				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	Play		Play / Slow				
	Pause/Timeshift		Pause / Step / Freeze				
	Stop		Stop / Hold				
	Rec		Rec / Rec Mode				
	Red/PVR		Red / Netflix / Search				
	Green/V-Format		Green / APP / Repeat				
	Yellow/Aspect		Yellow / YouTube / Repeat				
	Blue/Timer		Blue / Prime Video / Random				

