



 











 










 







 

 

 



 







 



 











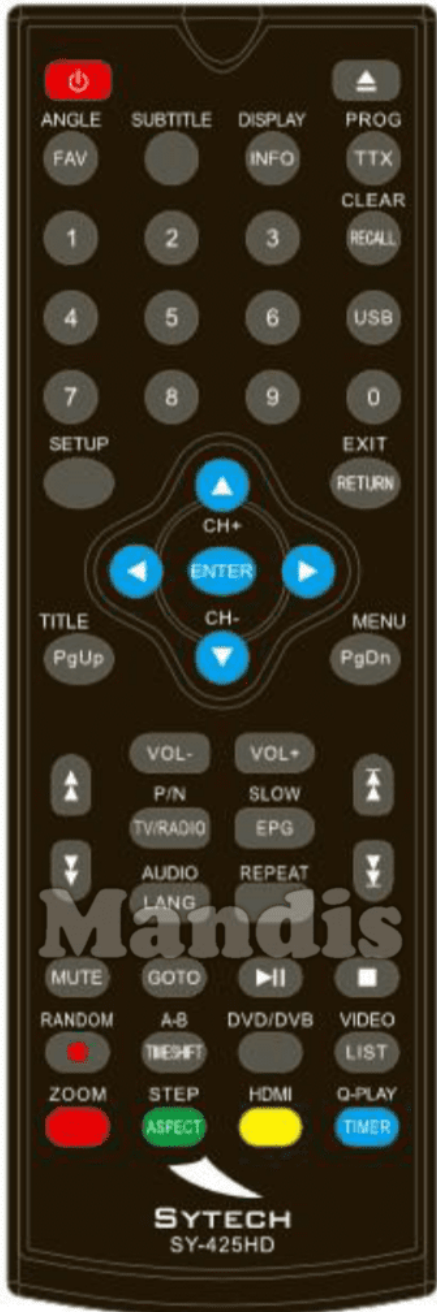


Original		Replacement		Original		Replacement	
	Power		Power		7		7
	Open / Close		Eject / Surround		8		8
	Fav / Angle		Fav / Marker / PC		9		9
	Fav / Angle		Shift + Info / Angle		0		0
	Subtitle		Subtitle / EQ		Setup		Setup / OPT /
	Info / Display		Display / Media		Up / CH+		CH+ / Page+
	Info / Display		Info / Angle		Up / CH+		Up
	TTX / Prog		Text / Goto		Return / Exit		Exit / Cancel / Clear
	TTX / Prog		Shift + TV/Radio / Program		Left		Left
	1		1		Enter		OK
	2		2		Right		Right
	3		3		PgUp / Title		Shift + CH+ /
	Recall / Clear		Back / Return		PgUp / Title		Sound / Title
	4		4		Down / CH-		CH- / Page-
	5		5		Down / CH-		Down
	6		6		PgDn / Menu		Menu / Home
	USB		Shift + 8		PgDn / Menu		Shift + CH- /

Page-





Original	Replacement	Original	Replacement
>>	>> / Tune+	Timeshift / AB	+ Shift + Yellow / YouTube /
Vol-	Vol-	DVD / DVB	+ Shift + 2
Vol+	Vol+	List / Video	Smart / List
>>	>> / Preset+	Red / Zoom	Zoom / Size
TV/Radio / P/N	TV/Radio /	Red / Zoom	Red / Netflix / Search
EPG / Slow	Guide / EPG / /--	Green / Aspect / Step	Picture / Format
EPG / Slow	+ Shift + Play /	Green / Aspect / Step	Green / APP / Repeat
<<	<< / Tune-	Green / Aspect / Step	Pause / Step / Freeze
Lang / Audio	Audio / Lang I/II	Yellow / HDMI	Yellow / YouTube / Repeat
Repeat	+ Shift + Green / APP /	Yellow / HDMI	+ Shift + 0
<<	<< / Preset-	Blue / Timer / QPlay	Sleep / Timer
Mute	Mute / Dimmer	Blue / Timer / QPlay	Blue / Prime Video / Random
Go To	+ Shift + Text /		
Play / Pause	Play / Slow		
Stop	Stop / Hold		
Rec / Random	Rec / Rec Mode		
Rec / Random	+ Shift + Blue / Prime Video / Random		

