


























 







Original	Replacement	Original	Replacement
	Power		EPG
	Mute		Guide / EPG / -/--
	TV/RAD		Up
	www		Menu
	PIP		Left
	Grid		OK
	Swap		right
	Sub ch		Exit
	P/Pg+		Down
	RCL		Red
	Vol+		Green
	P/Pg-		Yellow
	i		Blue
	Vol-		1
	FAV		2
	Check		3
	Message		4
			5





Original	Replacement
6	6
7	7
8	8
9	9
Music	Sound / Title
0	0
Photo	Picture / Format
Rec	Rec / Rec Mode
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
Recall	AV / Input / RDS
>	>>  / Preset+
Stop/→	Stop / Hold
Pause	Pause / Step / Freeze
[ ]]	Shift + Zoom /
[...]	Subtitle / EQ

Original	Replacement
TXT	Text / Goto
Audio	Audio / Lang I/II

