





Original	Replacement
PP	Back / Return
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	Fav / Marker / PC
0	0
--	Guide / EPG / -/--
M	Menu / Home
i	Info / Angle
I-II	Audio / Lang I/II

Original	Replacement
Mute	Mute / Dimmer
Left	Left
Up	Up
Right	Right
OK	OK
Down	Down
V -	Vol-
V +	Vol+
P -	CH- / Page-
P +	CH+ / Page+
Red / Sound	Red / Netflix / Search
Red / Sound	Sound / Title
Green / Picture	Green / APP / Repeat
Green / Picture	Picture / Format
Yellow / Feature	Yellow / YouTube / Repeat
Blue / Install	Blue / Prime Video / Random
Text	Text / Goto





Original		Replacement	
	[≡o]	 Sleep / Timer	
	Hold	 Stop / Hold	
	[≡X]	 Exit / Cancel / Clear	
	Mix / PIP Swap	 Smart / List	
	PIP / Size	 Zoom / Size	
	PIP Down / [≡?]	 I<< / Preset-	
	PIP Up / Index	 >>I / Preset+	
	[TV]	 TV/Radio /	
	[AV]	 AV / Input / RDS	

Original		Replacement	

