












 











 

 

 

 

 



 



 



 









 

 







Original		Replacement		Original		Replacement	
	Power		Power		Exit		Exit / Cancel / Clear
	Mute		Mute / Dimmer		Up/FAV+		Up
	1		1		Down/FAV-		Down
	2		2		Left		Left
	3		3		Right		Right
	4		4		Enter		OK
	5		5		CH+		CH+ / Page+
	6		6		CH-		CH- / Page-
	7		7		Display		Display / Media
	8		8		Open/Close/Smart		Eject / Surround
	9		9		VOL+		Vol+
	0		0		Vol-		Vol-
	FAV		Fav / Marker / PC		USB/Media		Shift + Display / Media
	Recall		Back / Return		Play/Pause/Text		Play / Slow
	Menu		Menu / Home		Stop/Index		Stop / Hold
	Source		AV / Input / RDS		Rec/Media2		Rec / Rec Mode
	EPG		Guide / EPG / -/--		I<</Hold		I<< / Preset-





Original	Replacement
>>/Size	>> / Preset+
<</S.Page	<< / Tune-
>>/Reveal	>> / Tune+
Red/Goto	Red / Netflix / Search
Green/Slow	Green / APP / Repeat
Yellow/REPT	Yellow / YouTube / Repeat
Blue/A-B	Blue / Prime Video / Random
D.Setup	Setup / OPT /
D.Menu	D.Menu / Top
D.Title	Smart / List
D.Prog	Text / Goto
I-II/Nicam	+ Shift + Picture / Format
P.Mode	Picture / Format
S.Mode	Sound / Title
P.Size	Zoom / Size
Audio	Audio / Lang I/II
Sleep	Sleep / Timer

Original	Replacement
S.Title	Pause / Step / Freeze
Tv/Radio	TV/Radio /

